




FITTING INSTRUCTIONS FOR FI0040 FRAME INSERTS
HUSQVARNA NUDA 900R 2012-

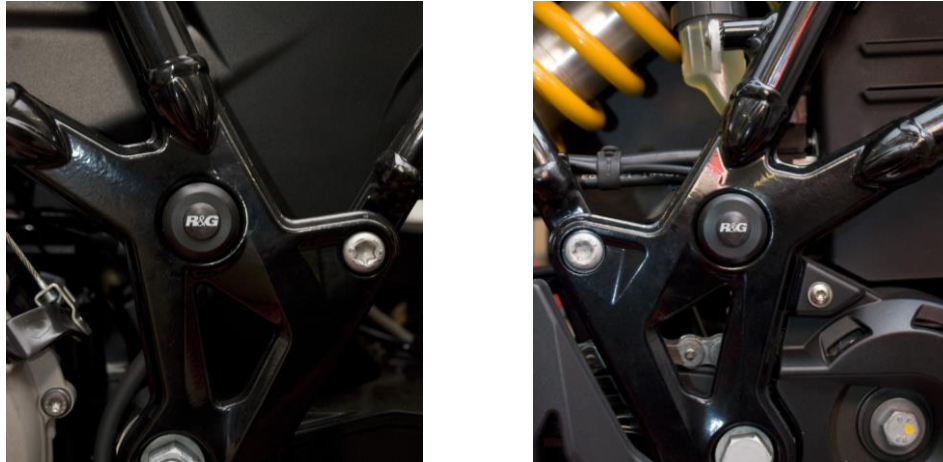


THIS KIT CONTAINS THE ITEMS PICTURED AND LABELLED BELOW.
DO NOT PROCEED UNTIL YOU ARE SURE ALL PARTS ARE PRESENT.

Please note that the way the kit is packed does not necessarily represent the way of mounting to the bike

Please note that in cases where kits are packed with a plastic tube separating components on the spindle bar (this tube should be discarded).

THE PARTS SHOWN MAY BE REPRESENTATIVE ONLY (FOR CLARITY OF INSTRUCTIONS ONLY)

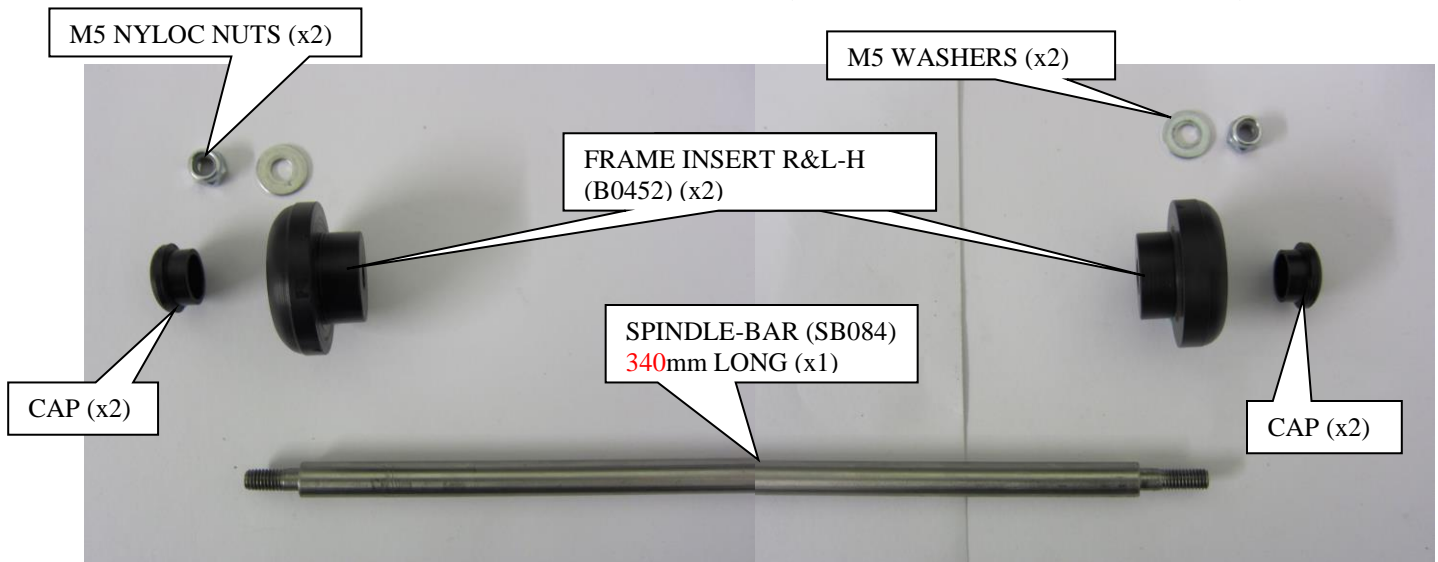



TOOLS REQUIRED

- Socket set to include 2x 8mm sockets and wrenches

FITTING INSTRUCTIONS

- Fit one nut and washer on spindle-bar (the end with shorter thread), engage the nut so the plastic insert of nut is fully engaged.
- Feed spindle-bar with nut and washer through either frame insert.
- Feed this assembly through the frame.
- Place the remaining frame insert into frame and over the exposed end of the spindle bar.
- Fit washer and nut from kit onto thread and tighten until both nuts are engaged in nylon and equal amounts protrude from either side. Do not overtighten – the nyloc nuts will hold it tight.
- Gently fit the caps into both frame inserts.

ISSUE 2 24/11/2016 (NSY)

CONSUMER NOTICE

The catalogue description and any exhibition of samples are only broad indications of the Products and R&G may make design changes which do not diminish their performance or visual appeal and supplying them in such state shall conform to the order. The Buyer acknowledges no representation or warranty (other than as to title) has been given or will apply to the Products other than those in R&G's order or confirmation and the Buyer confirms it has chosen the Products as being of merchantable quality and suitable for its particular purposes. Where R&G fits the Products or undertakes other services it shall exercise reasonable skill and care and rectify any fault free of charge unless the workmanship has been disturbed. The Buyer is responsible for ensuring that the warranty on the motorcycle is not affected by the fitting of the Products. On return of any defective Products R&G shall at its option either supply a replacement or refund the purchase money but shall not be liable if the Products have been modified or used or maintained otherwise than in accordance with R&G's or manufacturer's instructions and good engineering practice or if the defect arises from accident or neglect. Other than identified above and subject to R&G not limiting its liability for causing death and personal injury, it shall not be liable for indirect or consequential loss and otherwise its liability shall be limited to the amounts paid by the Buyer for the Products or the fitting or service concerned. These terms do not affect the Buyer's statutory rights.

R&G RACING RETURNS POLICY (NON-FAULTY GOODS)

Returns must be pre-authorized (if not pre-authorized the return will be rejected). Goods may only be returned direct to us if they were purchased direct from us (customer must prove if necessary). Otherwise to be returned to original vendor. Goods must be in resellable condition, in the opinion of R&G Racing. All returns are subject to a 25% restocking and handling fee (25% of the gross value exc. P&P – at the prevailing price at time of purchase). The customer must pay any and all carriage charges. No returns of discontinued products, unless within 14 days of purchase. This policy does not affect your statutory rights and does not refer to faulty goods.

R&G Racing

Unit 1, Shelley's Lane, East Worldham, Alton, Hampshire, GU34 3AQ

Tel: +44 (0)1420 89007 Fax: +44 (0)1420 87301 www.rg-racing.com Email: info@rg-racing.com



Instructions de montage
FI0040 Inserts de cadre - HUSQVARNA NUDA 900R 2012-




Vérifier le contenu de la boîte avant de déballer les pièces. Ne pas procéder au montage avant de s'être assuré au préalable que les articles figurant sur la photo du dessous soient bien présents.

La façon dont le kit est emballé ne représente pas nécessairement la façon de le monter sur la moto.

Les parties représentées peuvent parfois être uniquement représentatives
(Pour la clarté des explications).

S'il vous plaît, notez que dans les cas où les kits sont emballés avec un tube en plastique séparant les composants sur la barre, ce tube doit être jeté.

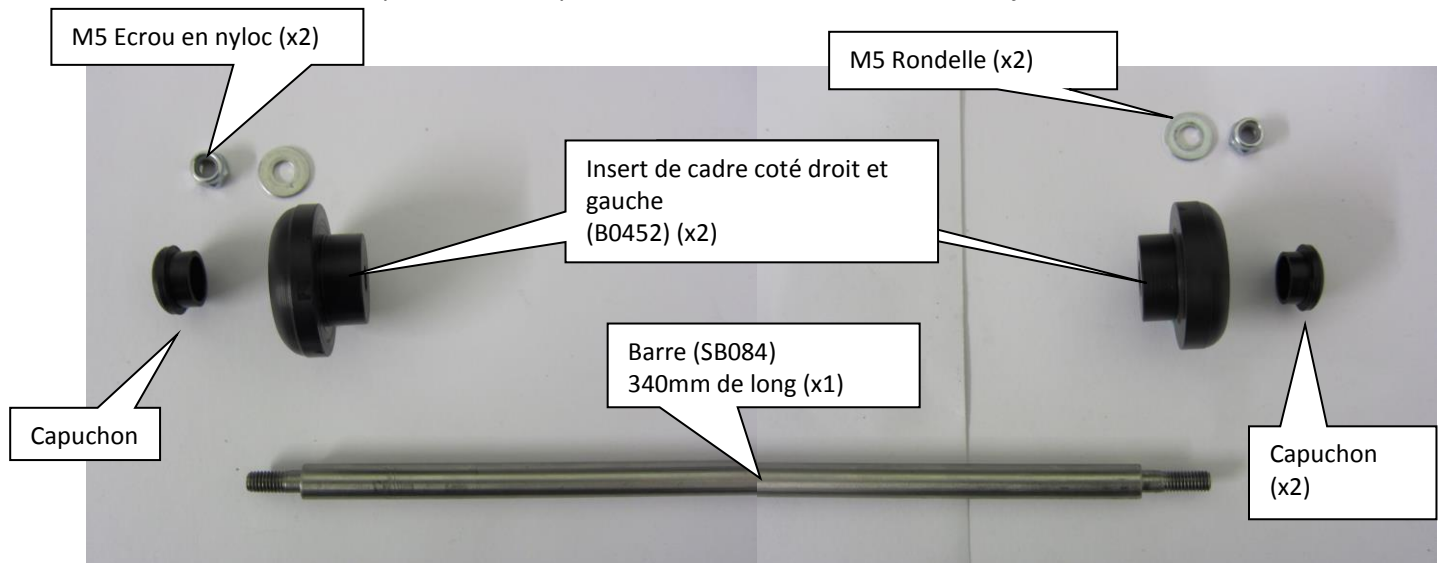



Outils requis

- 2 clefs de 8mm

Instructions de montage:

- Mettre un écrou et une rondelle sur la barre (l'extrémité avec le filetage le plus court), engager l'écrou de sorte à ce que l'insert en plastique de l'écrou soit complètement engagé.
- Placer la barre avec l'écrou et la rondelle à travers un des inserts de cadre.
- Placer cet ensemble à travers le cadre.
- Placer l'insert de cadre restant dans le châssis et sur l'extrémité exposée de la barre.
-
- Mettre les bouchons dans les 2 inserts.

ISSUE 2 24/11/2016 (NSY)