

811005 Honda CB500X Shock Shield Fitting Instructions



Kit Includes:

1X	C24444	Rubber Flap
1X	CFK811005	Bracket
2X	CBOLM50002	M5 X 10mm Stainless Button-head Bolt
2X	CNUTM50002	M5 Stainless Nyloc Nut
2X	CWASM50001	M5 Stainless Washer
2X	CBOLM80004	M8 X 10mm Stainless Hex-head Bolt

Fitting this Pyramid shock shield is quick and simple.

Attach the rubber flap to the bracket using the M5 fittings supplied (see **Fig 1**).

Attach the bracket to the bike using the M8 bolts supplied (see **Fig 2**).

Check fixings periodically.

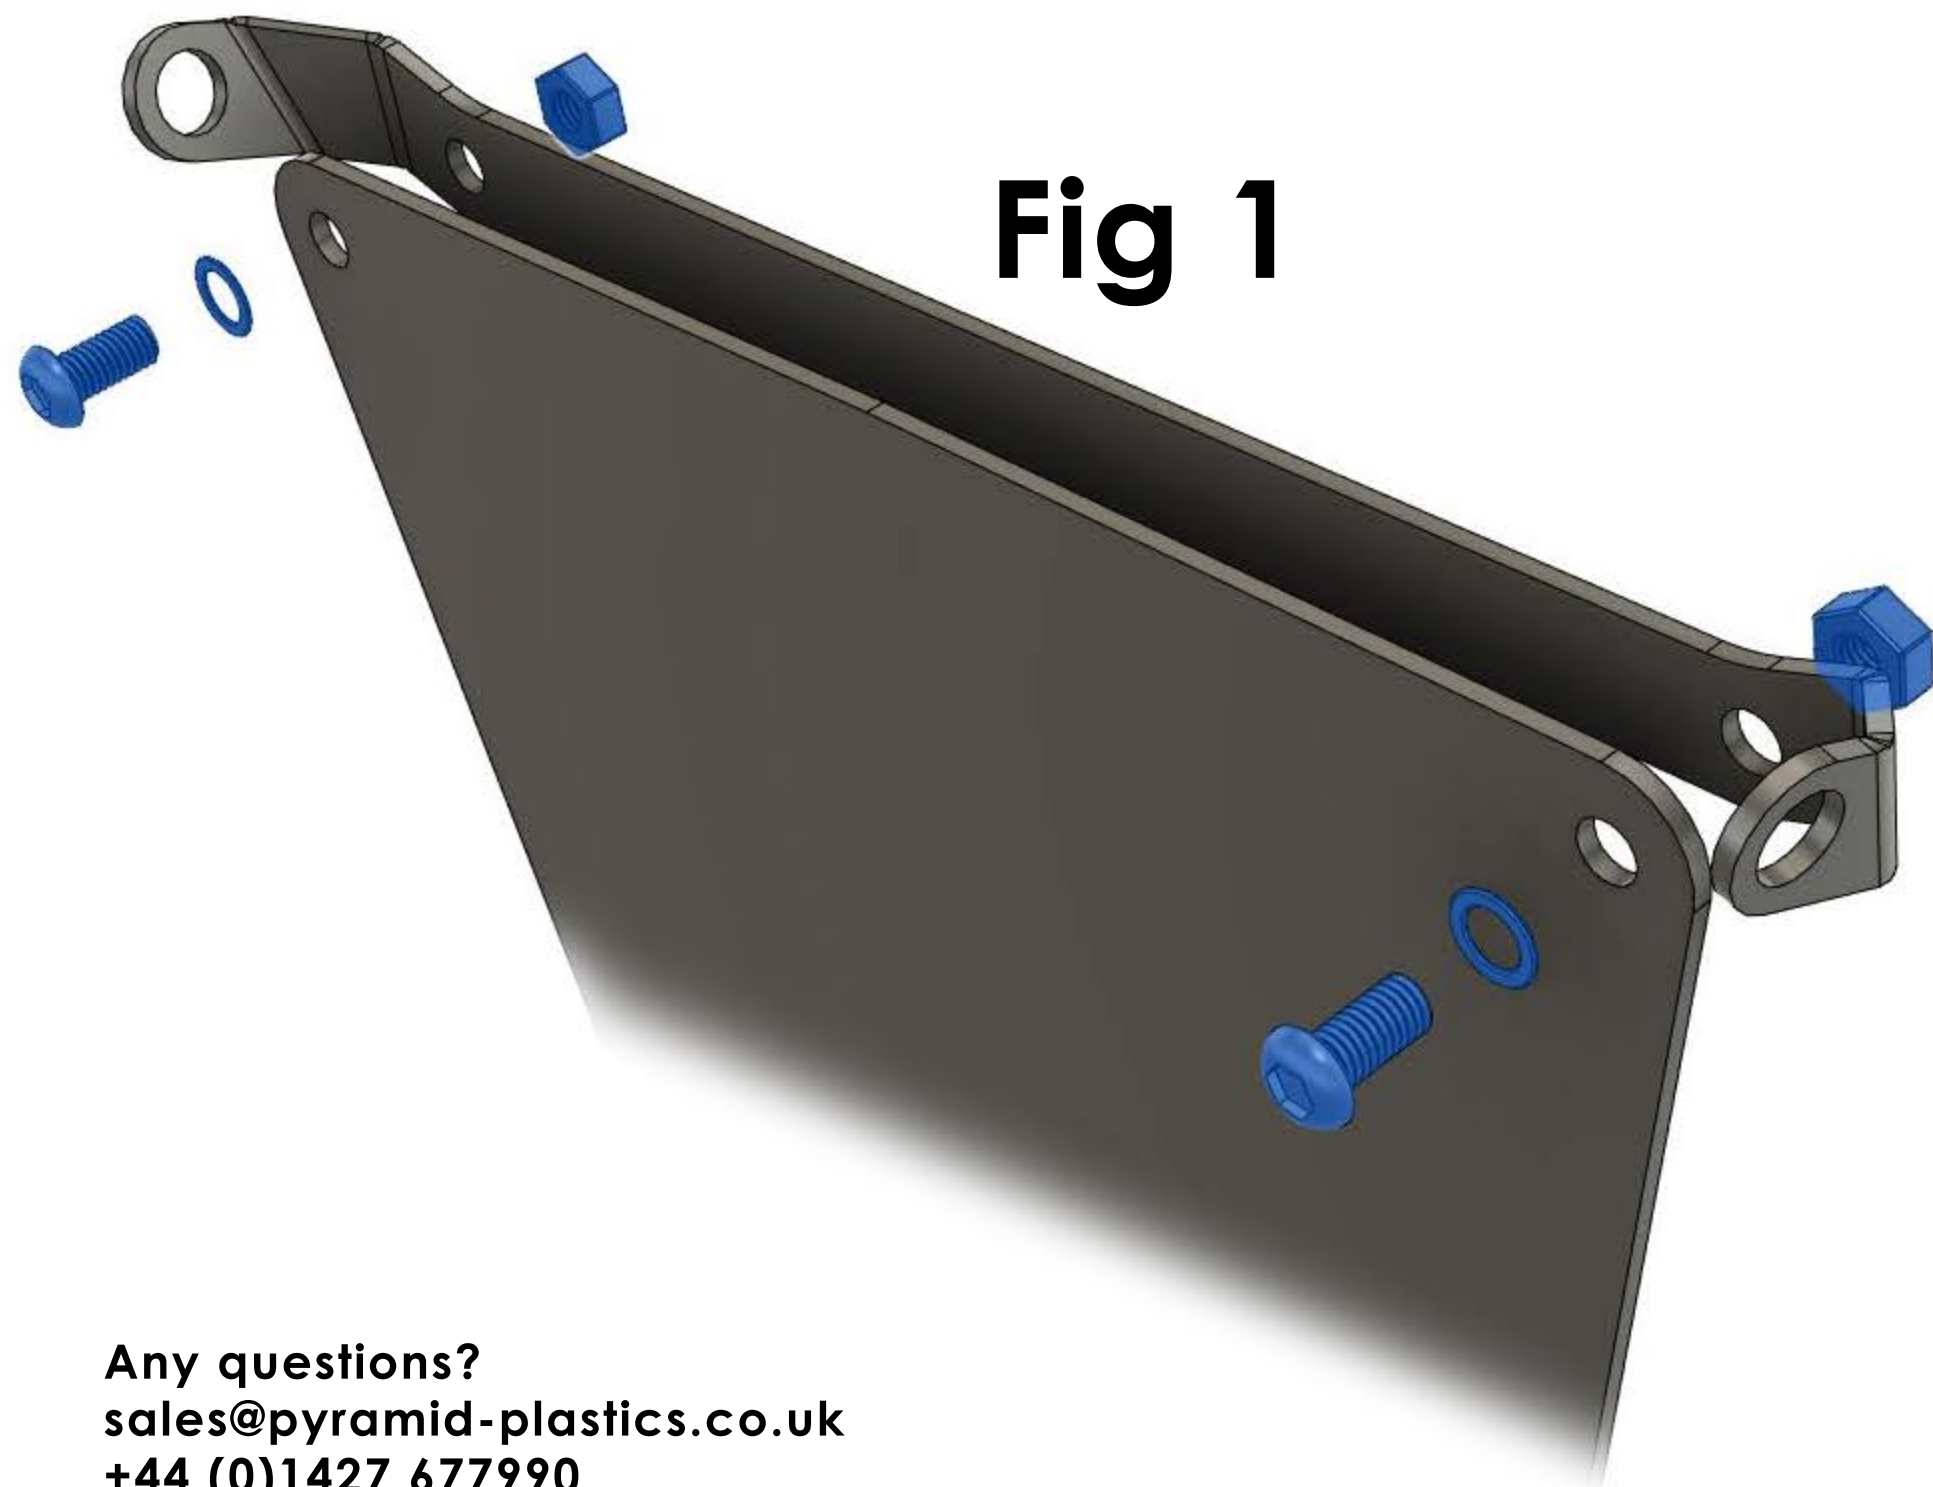


Fig 1

Any questions?
sales@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk



Follow us on social media and
feel free to leave us a review!

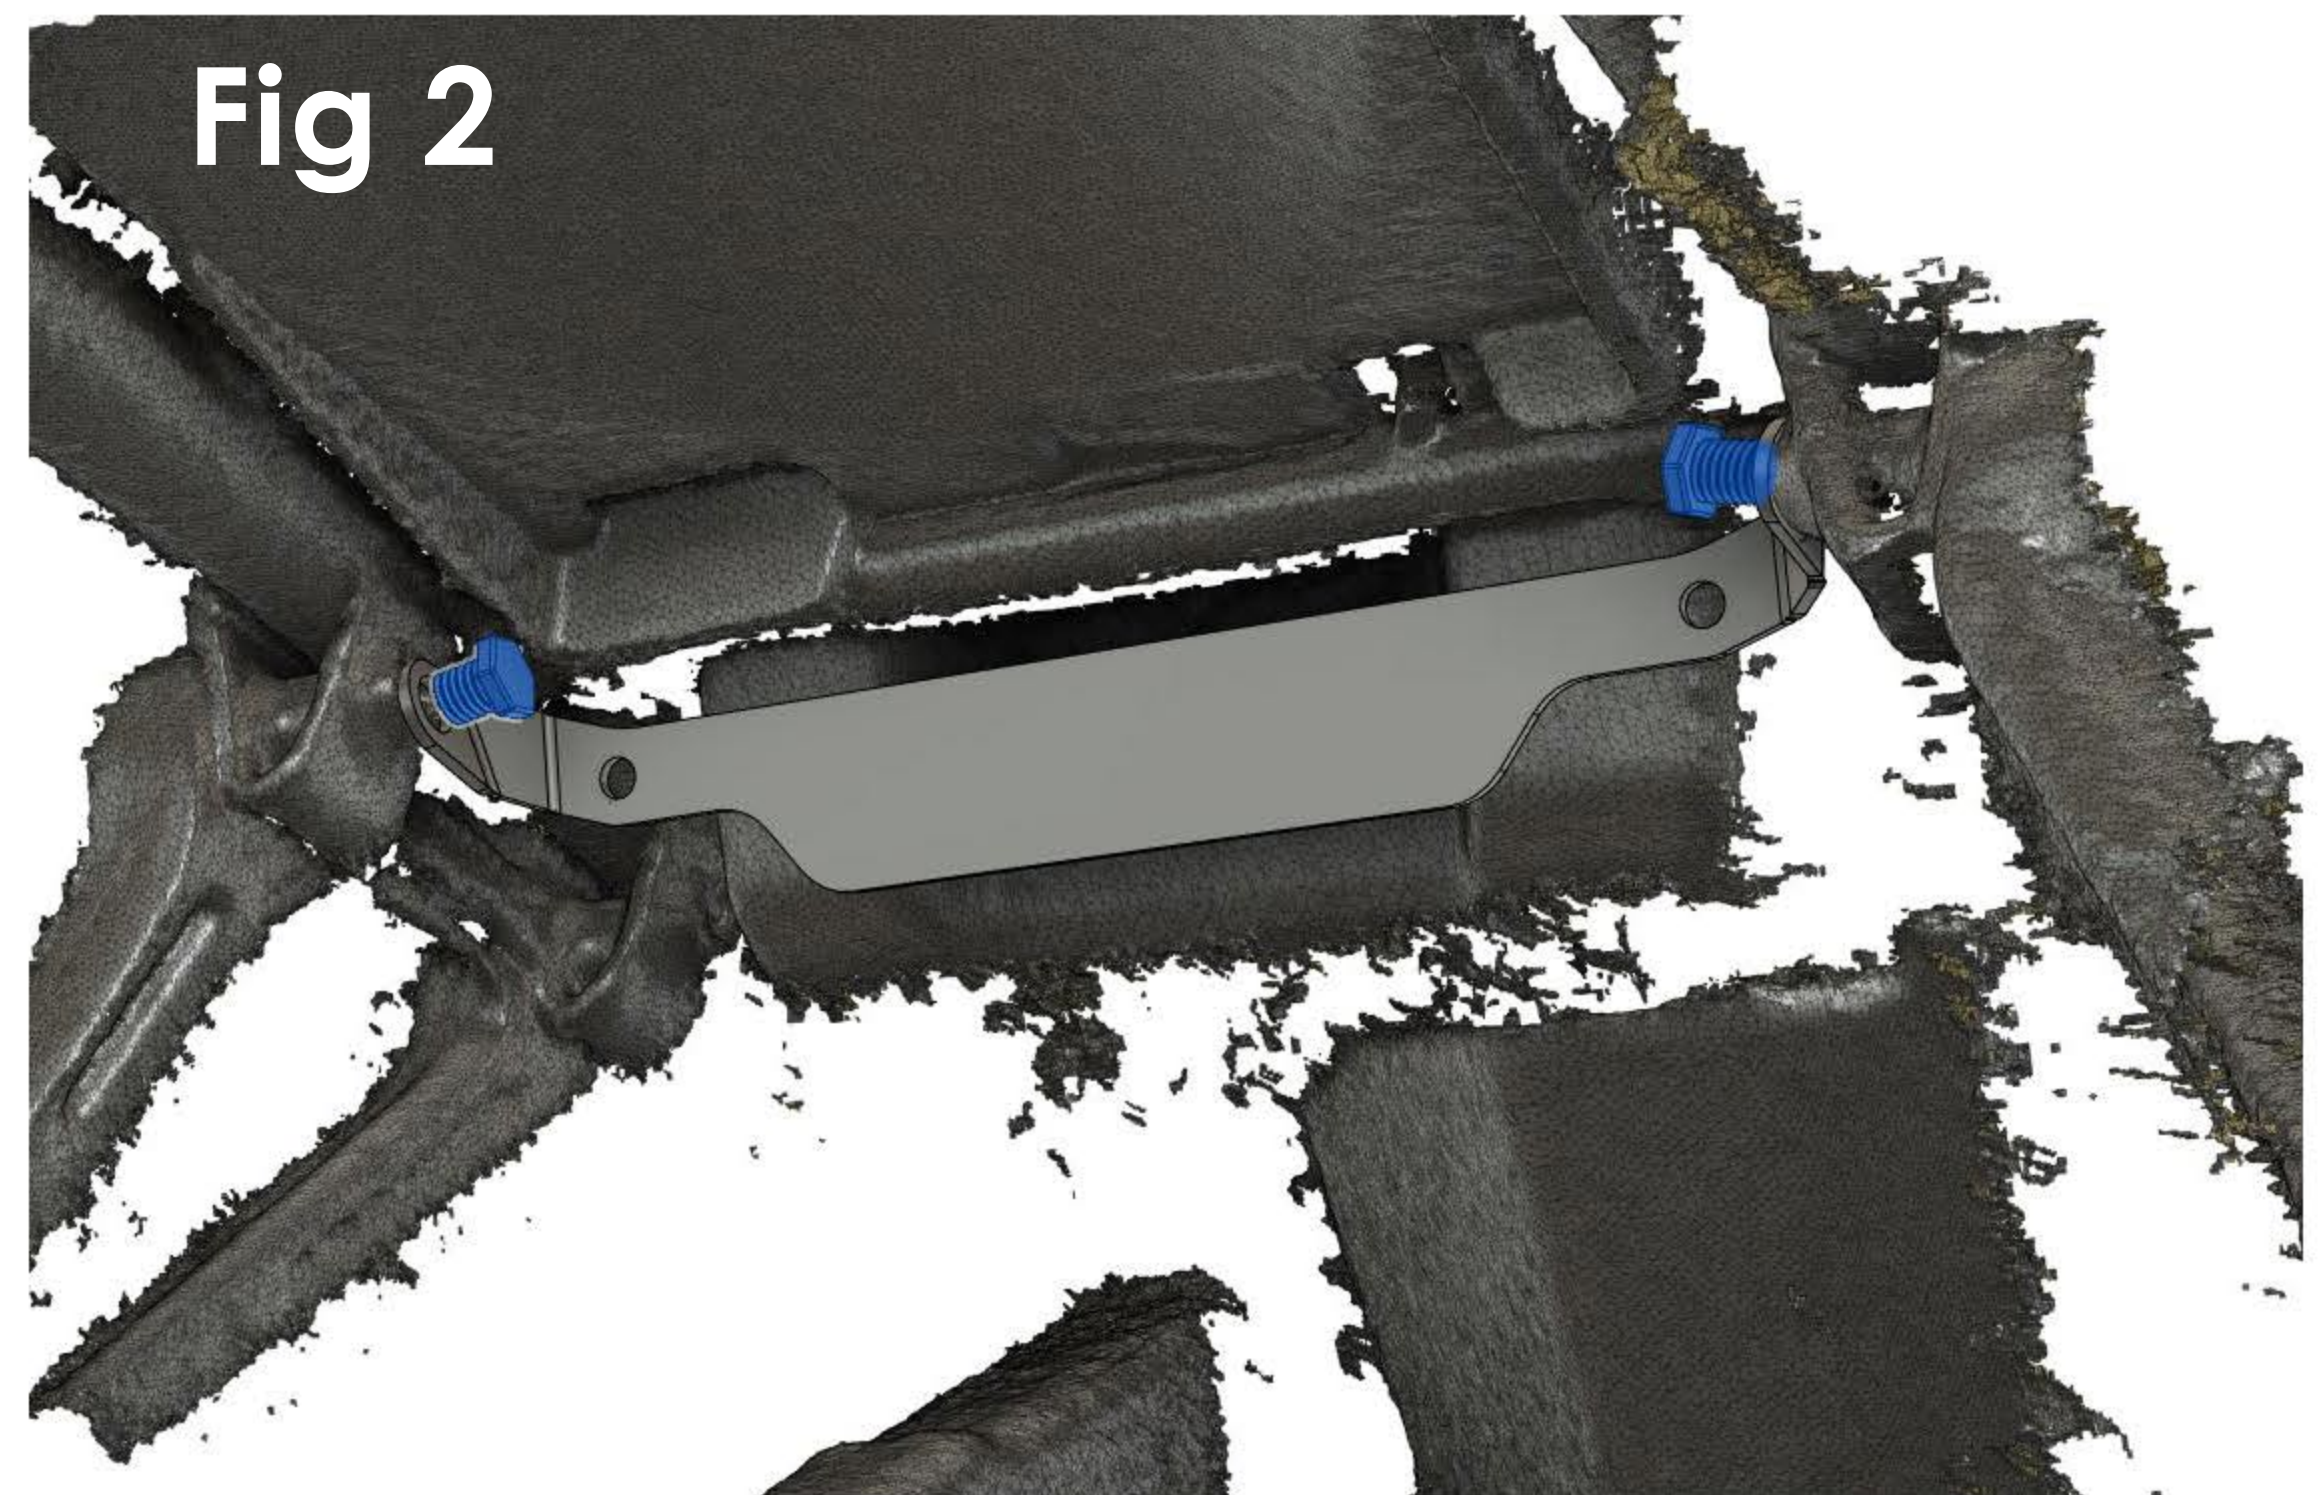


Fig 2

Note: we recommend attaching the M8 bolts using your hands to begin with - it can be awkward to gain access otherwise.

The M8 bolts highlighted here are fitted into the back of the pillion foot rest mounting points.

811005 Honda CB500X Shock Shield Fitting Instructions



Kit Includes:

1X	C24444	Rubber Flap
1X	CFK811005	Bracket
2X	CBOLM50002	M5 X 10mm Stainless Button-head Bolt
2X	CNUTM50002	M5 Stainless Nyloc Nut
2X	CWASM50001	M5 Stainless Washer
2X	CBOLM80004	M8 X 10mm Stainless Hex-head Bolt

Fitting this Pyramid shock shield is quick and simple.

Attach the rubber flap to the bracket using the M5 fittings supplied (see **Fig 1**).

Attach the bracket to the bike using the M8 bolts supplied (see **Fig 2**).

Check fixings periodically.

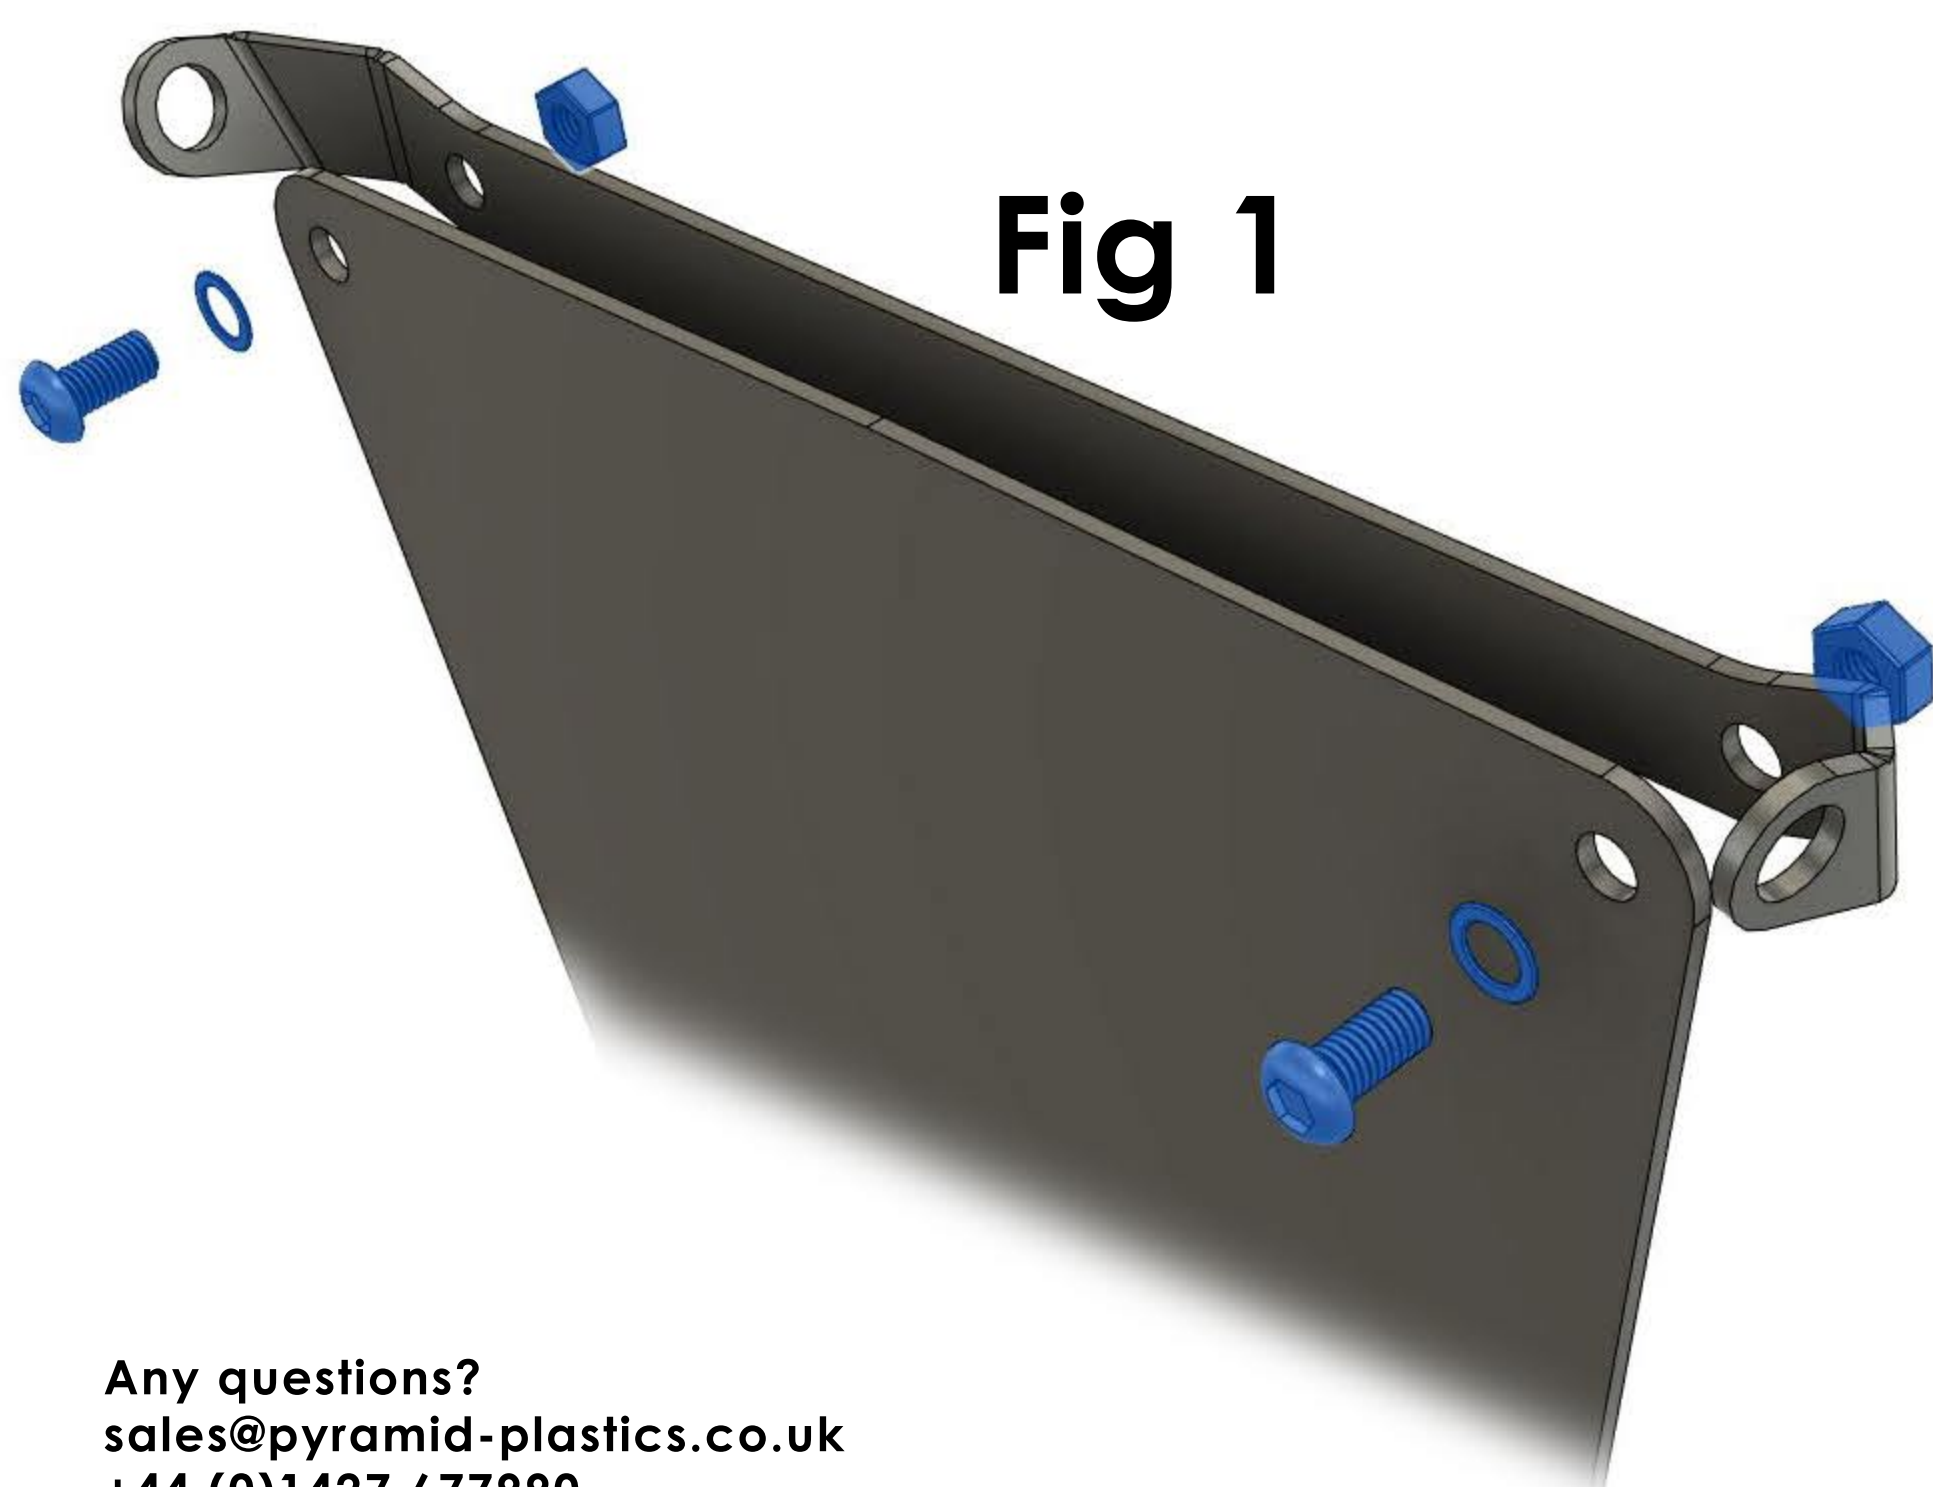


Fig 1

Any questions?
sales@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk



Follow us on social media and
feel free to leave us a review!

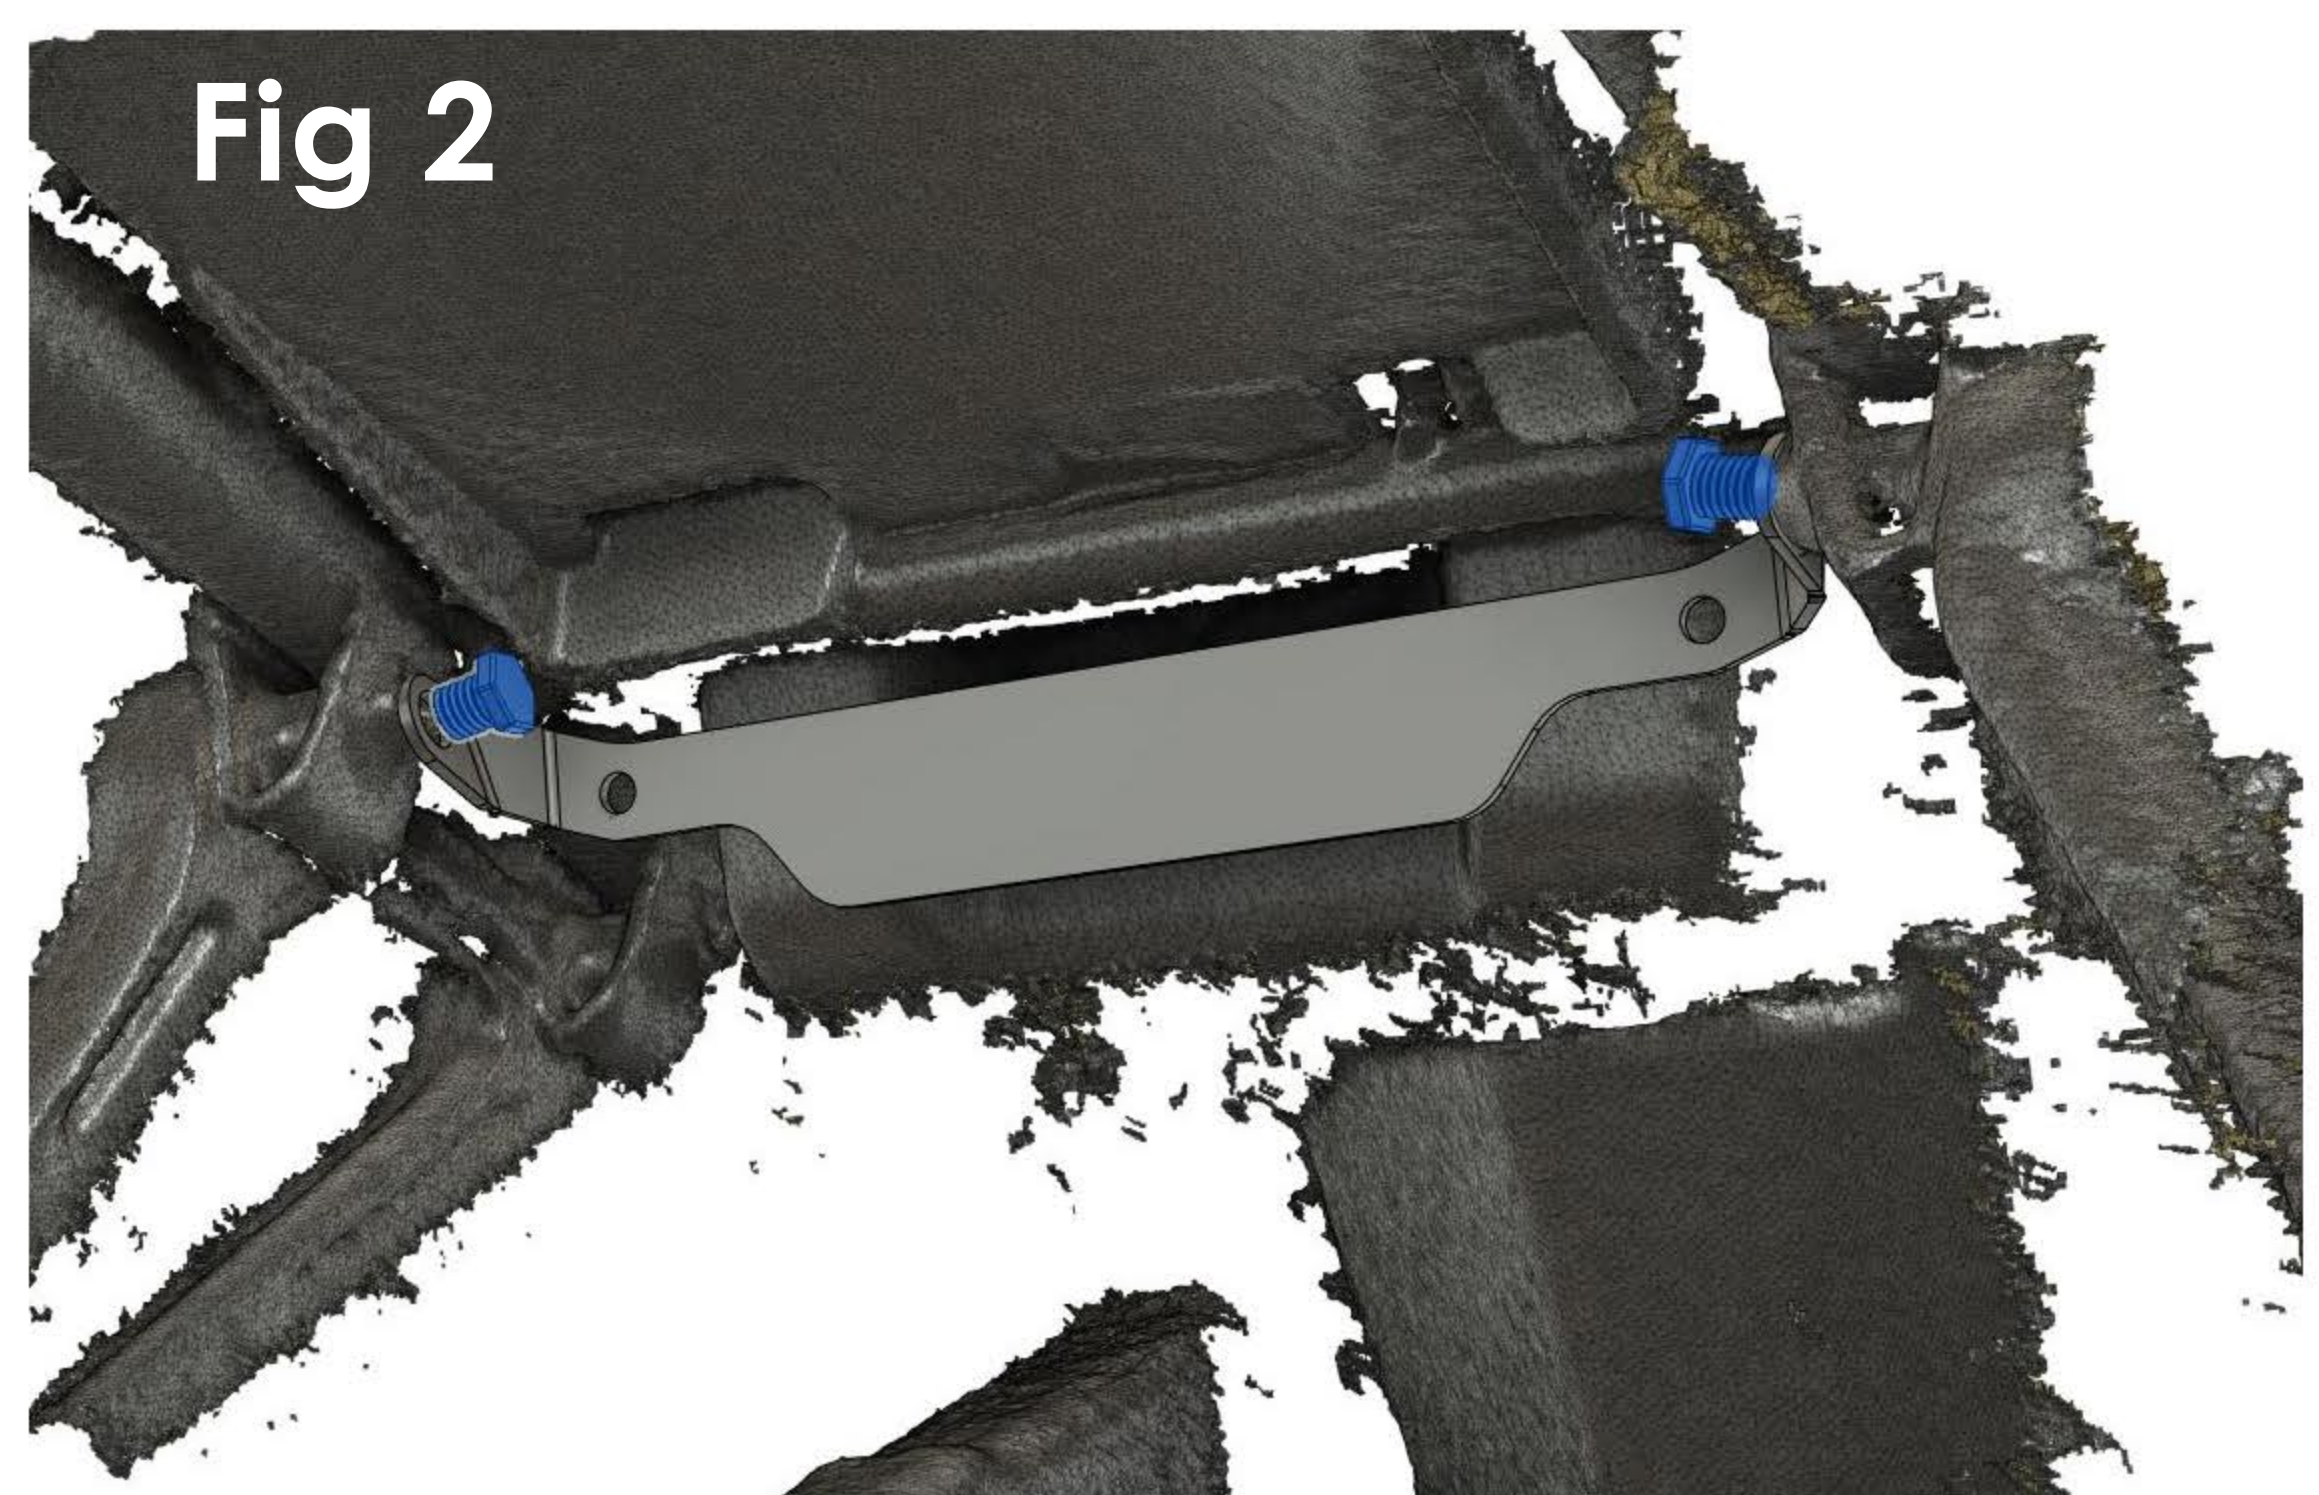


Fig 2

Note: we recommend attaching the M8 bolts using your hands to begin with - it can be awkward to gain access otherwise.

The M8 bolts highlighted here are fitted into the back of the pillion foot rest mounting points.